

Instrukcja użytkowania GAZ0957

PRZED PRZYSTAPIENIEM DO PRACY NALEŻY ZAPOZNAĆ SIĘ Z INSTRUKCJĄ!

Zasady bezpieczeństwa

- ✓ Przed pierwszym użyciem należy sprawdzić czy w towarze nie brakuje części.
- ✓ Aby uniknąć skaleczenia się, nie próbuj samodzielnie naprawiać, demontować ani modyfikować urządzenia.
- ✓ **Produkt nie jest zabawką i nie może być używany przez dzieci.**
- ✓ Przechowywać w miejscu niedostępnym dla dzieci i zwierząt.
- ✓ Gdy w pobliżu znajdują się dzieci należy zachować szczególną ostrożność.
- ✓ Wymiany kartusza z gazem powinna dokonać tylko dorosła osoba!
- ✓ Nie należy pozostawiać bez kontroli włączonego urządzenia.
- ✓ Produkt nie może być łączony z innymi urządzeniami gazowymi oraz elektrycznymi.
- ✓ Nie wolno użytkować i włączać urządzenia, jeśli wykazuje ono widoczne uszkodzenia.
- ✓ Chronić przed kontaktem z wodą oraz ogniem.
- ✓ Nie należy czyścić produktu silnymi środkami chemicznymi ani zanurzać w wodzie. Rekomendujemy delikatne czyszczenie suchą szmatką.
- ✓ Używaj wyłącznie zgodnie z określonymi celami. Każde inne zastosowanie uważa się za przypadek użycia niezgodnego z przeznaczeniem. Za wszelkie szkody lub obrażenia spowodowane niewłaściwym użytkowaniem odpowiada użytkownik, a nie producent!
- ✓ Podczas użytkowania należy ciągle monitorować czy palnik się pali, gdyż w przypadku wycieku gazu może dojść do wybuchu.

ZACHOWAJ SZCZEGÓLNA OSTROŻNOŚĆ!

- ✓ Podczas zmiany gazu, otwórz okno lub wykonaj tę czynność na zewnątrz, by uniknąć zatrucia tlenkiem węgla.
- ✓ Zabrania się dotykania palnika, tacki ociekowej oraz wspornika garnków podczas i po gotowaniu, aby uniknąć poparzenia.

Funkcje produktu

Aby uruchomić produkt należy podłączyć kartusz gazowy, ustawić dźwignię w pozycji „ON”, by gaz zaczął się uwalniać do palnika, a następnie ustawić pokrętkę zaworu w pozycji „ON”, aby wytworzyć iskrę, która spowoduje odpalenie palnika.

Parametry techniczne

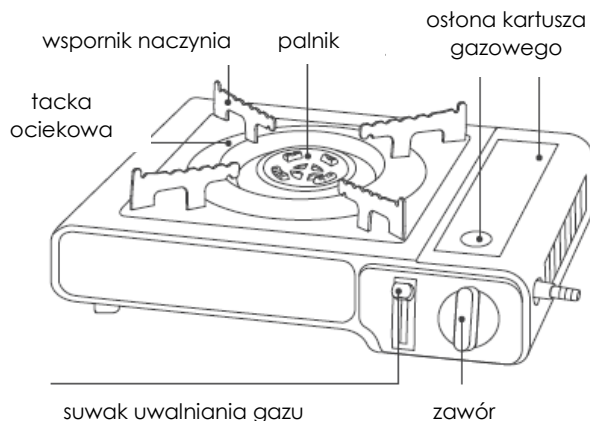
Czas ciągłego spalania:	±100 min
Zużycie gazu:	155 g/h
Moc:	2,8 kw
Wymiary:	34 x 25 x 8 cm

Uwaga!

Przeczytaj ostrzeżenia i instrukcje dotyczące bezpieczeństwa. Nie stosowanie się do nich może spowodować porażenie prądem, pożar lub obrażenia ciała. Zachowaj instrukcje i ostrzeżenia na przyszłość.







Symbole

	Produkt zgodny z obowiązującymi dyrektywami.
	Zużyty produkt oddaj do utylizacji, postępuj zgodnie z obowiązującymi przepisami w Twoim kraju.



**Importer/producent zastrzega sobie prawo
do dokonywania modyfikacji i zmian w instrukcji.**

Sposób użycia kuchenki

Krok 1  Ustaw tackę ociekową wspornikami do góry i otwórz pokrywę zbiornika gazu.	Krok 2  Podnieś prowadnicę regulatora, włoż zbiornik w linii prostej i zamknij korek regulatora.	Krok 3  Ustaw prowadnicę regulatora w szczelinie zbiornika i zamocuj go dźwignią (ON).
1. Zaczynamy	2. Naciśnij dźwignię mocującą kartusz gazowy	3. Zapłon
 1. Przekręć zawór do pozycji „MIN”. 2. Ustaw dźwignię w pozycji „OFF”. 3. Jeśli zawór nie znajduje się w pozycji „MIN”, blokada zbiornika nie uruchomi się.	 Włóż zbiornik gazu, naciśnij dźwignię mocującą i dociśnij.	 Powoli przekręć zawór wtykowy przeciwnie do ruchu wskazówek zegara, aż usłyszysz dźwięk zatrzasknięcia. Powtórz ten krok, jeśli ogień nie rozpalł się.
4. Kontrola ognia	5. Gaśnięcie płomienia – automatyczne zwolnienie kartusza gazowego	6. Całkowite wyłączenie
 Ustaw zawór w pozycji pomiędzy „MIN” a „MAX”, aby dostosować wielkość płomienia.	 Gdy zawór obróci się do pozycji MIN, obieg powietrza zostanie odcięty, a zawór wyłączy się automatycznie.	 Po użyciu przechowuj zbiornik gazu i kuchenkę oddzielnie.

Nieprawidłowa lokalizacja

Blisko materiałów łatwopalnych  Trzymaj z dala od materiałów łatwopalnych, takich jak paliwo, nafta, gaz palny, aby uniknąć ryzyka pożaru i wybuchu.	Z dala od źródeł ciepła lub wietrznych miejsc  Może to prowadzić do przegrzania urządzenia i ryzyka wybuchu; wiatr może zdmuchnąć ogień na powierzchnię urządzenia lub stół, powodując pożar.
Niebezpieczne dla innych zastosowań  Nie używać do innych celów, aby uniknąć pożaru lub innych szkód.	Trzymać poza zasięgiem dzieci  Chroń dzieci przed zbliżaniem się, dotykaniem lub używaniem urządzenia, aby uniknąć poparzenia lub pożaru.
Zgaś płomień przed opuszczeniem miejsca  Nie zostawiaj urządzenia bez nadzoru ani nie zasypiaj podczas jego używania, aby zapobiec wysuszeniu i przegrzaniu, co może prowadzić do uszkodzeń lub pożaru.	Zachowaj odpowiednią odległość od ścian łatwopalnych  Podczas używania zachowaj co najmniej 20 cm odległości od łatwopalnych ścian, aby uniknąć pożaru.
Unikaj miejsc, gdzie mogą spadać przedmioty  Aby uniknąć ryzyka upadku przedmiotów, co może spowodować przewrócenie urządzenia i poparzenie, zachowaj ostrożność.	Unikaj miejsc z zastonami itp.  Zastony są łatwopalne. Zabrania się używania urządzenia w pobliżu zaston, aby uniknąć poparzeń i ryzyka pożaru.

Uwaga! Wysoka temperatura

Zabrania się, aby płomień kierował się na jedną stronę zbiornika gazu.  Powoduje przegrzanie zbiornika gazu, co niesie ryzyko eksplozji.	Nie używaj urządzeń z kamienia, garnków ceramicznych itp.  Materiały te przewodzą ciepło, prowadzi to do wzrostu temperatury wewnętrznej kuchenki, co może spowodować przegrzanie zbiornika gazu i ryzyko eksplozji.
Zabranione używanie dwóch lub więcej urządzeń obok siebie.  Due to the radiant heat, cause the internal temperature of cooker increase, which will lead to gas tank overheat and with explosion risk.	Nie należy podgrzewać pustych naczyń na kuchenke.  Heating empty cookware will produce high heat, which will cause internal temperature of cooker increased rapidly, and lead to gas tank overheat and with explosion risk.
Zabrania się używania garnków, które są większe niż średnica tacki ociekowej.  If the cooker is bigger than gas tank cover, lead to gas tank overheat and with explosion risk.	Nie używaj rusztu, płyty ceramicznej ani kamiennej płyty pokrytej folią aluminiową.  It's forbidden to roast squid, tomato. Due to the radiant heat, cause the internal temperature of cooker increase, which will lead to gas tank overheat and with explosion risk.
Zabrania się używania materiałów łatwopalnych w pobliżu płomienia.  Please use with distance at least 2 meters away, as heat radiant will lead to gas tank overheat and with explosion risk.	Zabrania się używania na kamieniach czy piasku przy bezpośrednim nasłonecznieniu.  Heat source will lead to gas tank overheat and with explosion risk.

Instructions for use GAZ0957

PLEASE READ THE INSTRUCTIONS BEFORE STARTING WORK!

Safety rules

- ✓ Before first use, check if any parts are missing from the product.
- ✓ To avoid injury, do not attempt to repair, disassemble, or modify the device yourself.
- ✓ **The product is not a toy and must not be used by children.**
- ✓ Store in a place inaccessible to children and animals.
- ✓ Exercise extra caution when children are nearby.
- ✓ Only an adult should replace the gas cartridge.
- ✓ Do not leave the device unattended while in use.
- ✓ The product must not be connected to other gas or electrical devices.
- ✓ Do not use or operate the device if it shows visible damage.
- ✓ Keep the device away from water and fire.
- ✓ Do not clean the product with harsh chemicals or submerge it in water. We recommend gently cleaning it with a dry cloth.
- ✓ Use the product only for its intended purposes. Any other use is considered improper and at the user's risk.
- ✓ The user is responsible for any damage or injury caused by improper use, not the manufacturer!
- ✓ When changing the gas cartridge, open a window or perform the task outdoors to avoid carbon monoxide poisoning.
- ✓ Do not touch the burner, drip tray, or pot supports during and after cooking to prevent burns.
- ✓ Continuously monitor whether the burner is lit while in use, as a gas leak could lead to an explosion.

BE EXTREMELY CAREFUL!

Product function

To start the product, connect the gas cartridge, set the slider to the "ON" position to release gas into the burner, and then turn the lever button to the "ON" position to generate a spark that will ignite the burner.

Technical parameters

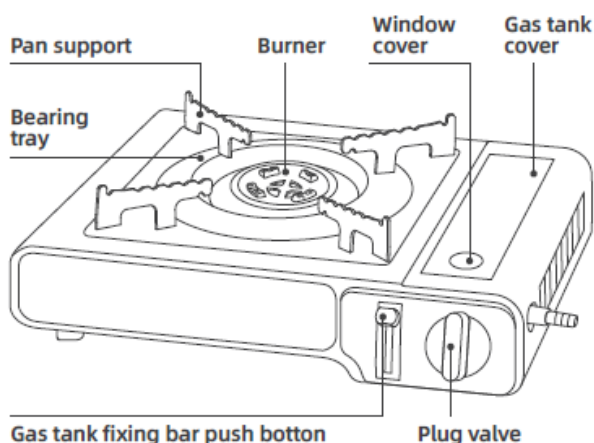
Burning time:	±100 min
Gas consumption:	155 g/h
Power:	2,8 kW
Size:	34 x 25 x 8 cm

Attention!









Read the warnings and safety instructions carefully. Failure to follow them may result in electric shock, fire, or injury. Keep these instructions and warnings for future reference.


Symbols


	Product compliant with current directives/regulations.
	Dispose of the used product in accordance with applicable regulations in your country.



**The importer/manufacturer reserves the right to make
modifications and changes to the instructions.**

Cooker usage method		
Step 1  Place the cooker in a hard, flat position, then turn the four corners of the pot up and open the gas tank cover.	Step 2  Lift the tank guide plate on the top of the regulator with your left hand, so that the gap on the tank is in a straight line with the tank guide plate, and then cover the tank cap.	Step 3  Press the tank retaining lever button and clamp the tank. The gap on the tank is in a straight line with the guide plate of the tank.
1. Ready to start	2. Press the gas tank fixing lever button	3. Ignition
 1. Turn the plug valve to the „MIN“ position. 2. Put the gas tank fixed lever button in the „OFF“ position. 3. If the plug valve is not in the „MIN“ position, the fixed rod of the gas tank will not start, so the device cannot be installed.	 Put the gas tank in, press the gas tank fixing lever button, and press to the position of the upper tank.	 Slowly turn the plug valve counterclockwise until you hear a „pop“ sound. Repeat this step if the fire is not lit.
4. Fire control	5. Automatic tank ejection device starts (flameout)	6. Completely shut down
 Turn the plug valve between „MIN“ and „MAX“ to adjust the size of the flame.	 When the plug valve turns clockwise to the „MIN“ position, the air circuit is cut off and the valve will flameout automatically.	 After use, keep the gas tank and cooker separately.

Disabled location	
Near flammable materials  Far away from flammable materials such as fuel, lamp-oil, combustion gas, in order to avoid risks of burning and explosion.	Away from heat resource or windy areas  It will lead to cooker overheat and with risk of explosion; the wind blows fire to the cooker's Surface or the table, caused fire.
It's dangerous for other uses  It's not allowed for other uses, lest to cause fire or other damages.	Out of children's reach  Please prevent children to approach, touch or use, lest to cause scald or fire.
Must flame out before go out  Should not leave or sleep during using, lest the cooker is dried and overheat, thus cause damages or fire.	Keep certain distance from flammable wall  During using, please keep at least 20 cm away from flammable wall, lest to cause fire.
Areas with objects falling out  In order to avoid the risk of objects falling off and caused cookers fall down and lead to the risk of scald.	Areas with curtain  Curtains are flammable. It's forbidden to use nearby, lest get burned and the risk of fire.

Caution! High temperature	
It's forbidden that flame blow to one side of gas  Cause gas tank overheat, with explosion risk.	Don't use appliance of stone, casseroles or  As these materials have heat conductivity, it will cause internal temperature of cooker increased, will lead to gas tank overheat and with explosion risk.
It's absolutely forbidden to use 2pcs or more in parallel  Due to the radiant heat, cause the internal temperature of cooker increase, which will lead to gas tank overheat and with explosion risk.	Don't put empty cookware on the cooker to heat  Heating empty cookware will produce high heat, which will cause internal temperature of cooker increased rapidly, and lead to gas tank overheat and with explosion risk.
It's forbidden to use iron plate, cooker etc that are bigger than gas tank cover  If the cooker is bigger than gas tank cover, lead to gas tank overheat and with explosion risk.	Don't use iron net, ceramic plate, stone plate covered with tin foil paper  It's forbidden to roast squid, tomato. Due to the radiant heat, cause the internal temperature of cooker increase, which will lead to gas tank overheat and with explosion risk.
It's forbidden to use near flame or flammable materials  Please use with distance at least 2 meters away, as heat radiant will lead to gas tank overheat and with explosion risk.	It's forbidden to use on the seaside, cobblestone, sand bench with direct sunshine.  Heat source will lead to gas tank overheat and with explosion risk.