

ASSEMBLY INSTRUCTION

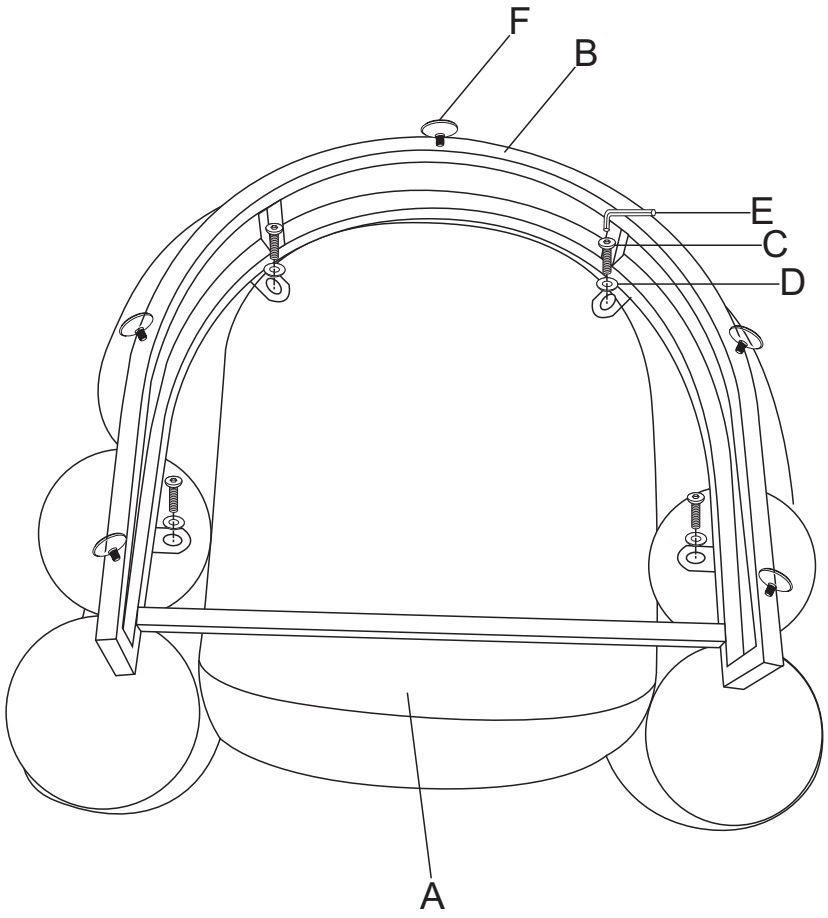

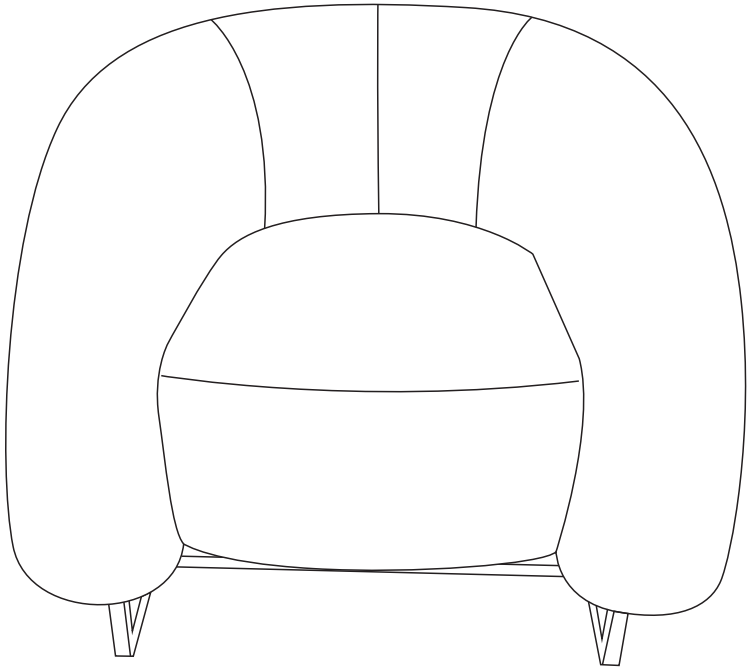

Ax1	Bx1	Cx4	Dx4	Ex1	Fx5
