Assembly Instructions

AX1

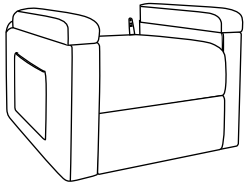

BX1

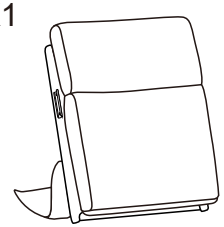

CX1



DX1



EX4



FX4



1

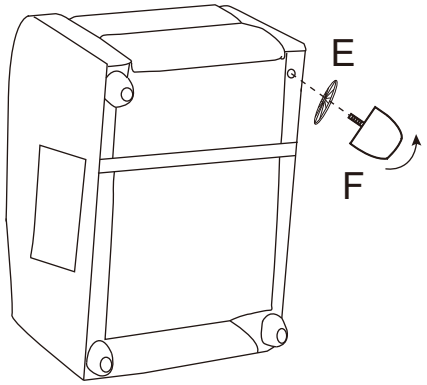

2

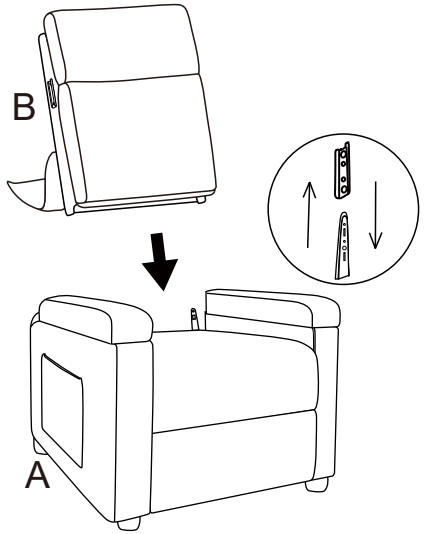

3

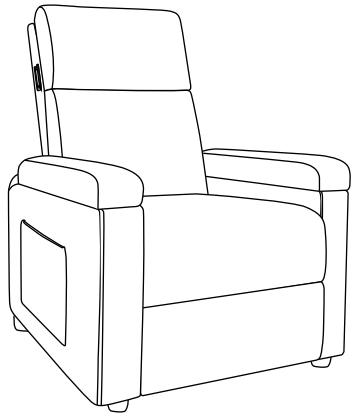

4

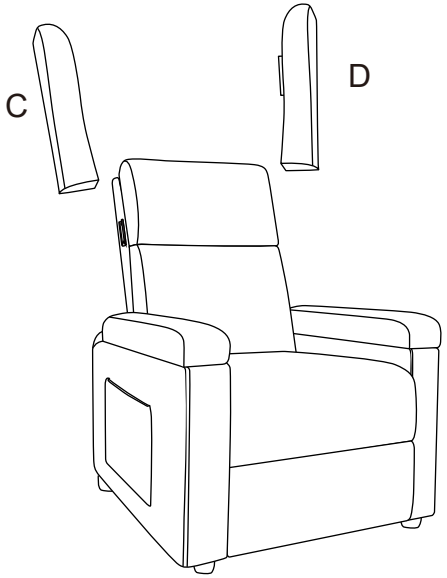

5

